

Montage step 1

The Moorsafe anchor is hot-dip galvanized, and therefore it might sometime be useful to hammer when inserting the screws.


Step 1:

Bolt the front of the anchor with the longer screws. Leave the screws loosely tightened so that the arms still are movable.

Montage step 2

Step 2:

Assemble the back plate to the arms with the anchor in an upside-down position. After having inserted all the screws, first tighten the 5 screws in the front firmly, and then finally tighten all the screws definitely.

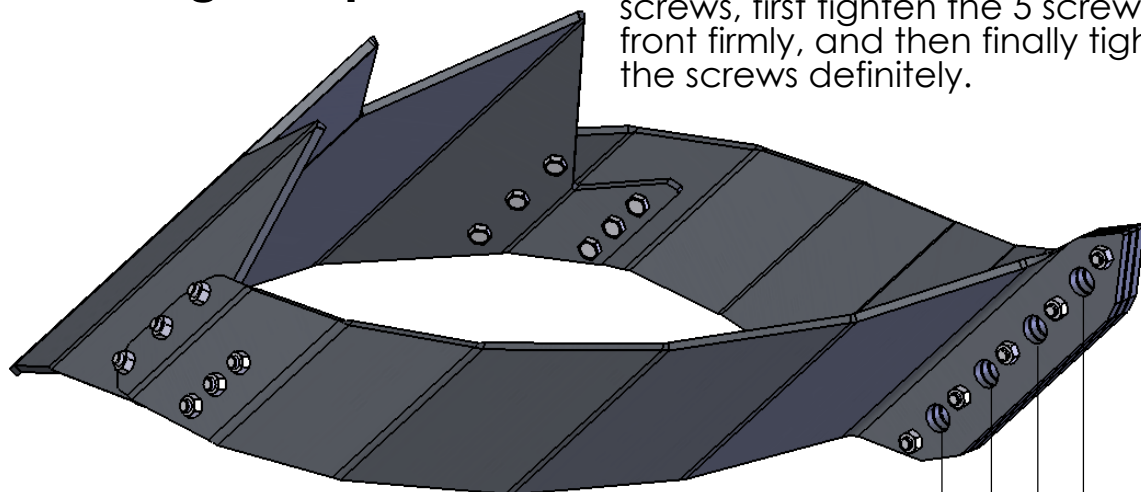

Shackle hole for back-up anchor.

Shackle hole for very soft clay ,only for straight pull.

Shackle hole for soft to medium clay/sand. Allows up to 30 deg. sideway force.

Shackle hole for hard clay/sand. Allows up to 45 deg. sideway force.

TOLERANCE: SS-ISO 2768-C

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF MOORSAFE AB. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF MOORSAFE AB IS PROHIBITED.

A4

SCALE: 1:20

SHEET 1 OF 1

MATERIAL S355J2+N

WEIGHT [KG]

Title_Design_Size_Revision

Moorsafe AB

Moorsafe montage